

Talking Decision Maker

OWNER'S MANUAL — Please read before using this equipment.

Answers your questions at the touch of a button!

Take fate into your own hands with your Talking Decision Maker! Having trouble deciding? Ask your Talking Decision Maker! The various answers and hilarious voices will keep you coming back for more! Fun at work, at home, at school, or anywhere on the go!

INSTALLING BATTERIES

Your Talking Decision Maker requires two AA batteries (not supplied) for power. For the best performance and longest life, we recommend RadioShack alkaline batteries.

Cautions:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.

1. Use a Phillips screwdriver to remove the screw from the battery compartment cover, then lift the cover up to remove it.

2. Place the batteries in the compartment as indicated by the polarity symbols (+ and -) marked inside.
3. Replace the cover and secure it with its screw.


When the sound becomes weak or distorted, the lights dim, or the Decision Maker stops operating properly, replace the batteries.

Warning: Dispose of old batteries promptly and properly. Do not burn or bury them.

Caution: If you do not plan to use the Decision Maker for a week or longer, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.

PLAYING WITH THE TALKING DECISION MAKER

1. To turn on the Talking Decision Maker, slide HI/LO/OFF to HI (higher volume) or to LO (lower volume).

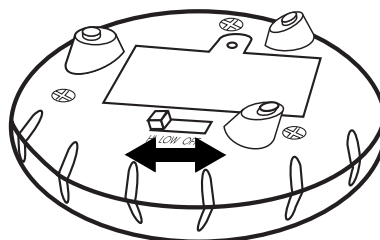

2. Ask your question, and press the button on top. The button lights, a random melody sounds, and the Decision Maker answers your question using the following phrases:

- That's a great idea!
- Yes, yes!
- A big 10-4, little buddy.
- The signs are favorable.
- Cool!
- Go ask your mom.
- That question is like, lame.
- Don't push your luck, man!
- Man, you crazy!
- Forget about it!
- I am wondering the same thing myself.
- The future is murky; try again.

3. To turn off the Talking Decision Maker, slide HI/LO/OFF to OFF. To save power, always turn off the unit when you finish using it.

CARE

Keep the Decision Maker dry; if it gets wet, wipe it dry immediately. Use and store the Decision Maker only in normal temperature environments. Handle the Decision Maker carefully; do not drop it. Keep the Decision Maker away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the Decision Maker's internal components can cause a malfunction and invalidate its warranty. If your Decision Maker is not performing as it should, take it to your local RadioShack store for assistance.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.
RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99

RadioShack Corporation
Fort Worth, Texas 76102

60-1199
06A00
Printed in Hong Kong